Item #141-143
Model #PN-1MYA-TRK

USE AND CARE GUIDE

MYA CONVERTIBLE TRACK PENDANT

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. - 6 p.m., EST, Monday-Friday

1-877-527-0313

HAMPTONBAY.COM

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this convertible track pendant. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents

Table of Contents.....2
Safety Information.....2
Warranty.....2
Pre-Installation.....3
Planning Installation 3
Tools Required.....3
Hardware Included.....3
Package Contents.....4
Installation.....5
Track Adapter Mounting.....5
Surface Mounting.....7
Care & Cleaning.....9
Troubleshooting.....9

Safety Information

- □ Read all instructions before installing.
- □ Consult a qualified electrician for installation of this fixture.
- □ For use with EC or H Series - Hampton Bay track system.
- □ If you have any non-electrical questions about this fixture, please contact our Customer Service Team at 1-877-527-0313 or visit www.hamptonbay.com. Please reference your SKU 141-143 or (UPC 773546241717).
- □ **SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

WARNING: Disconnect electrical power before adding to or changing the configuration of the track or modifying the light system.

CAUTION: To reduce the risk of a burn during relampimg, remove from the track before relampimg.

IMPORTANT: Do not install this lighting system in damp or wet locations.

IMPORTANT: Do not install any part of this system less than 5 feet above floor.

IMPORTANT: Do not install any luminaire assembly closer than 6 inches from any curtain, or similar combustible material.

IMPORTANT: The proper method of mechanically securing and electrically connecting each electrical fitting to the track shall be clearly described.

IMPORTANT: Inspect the wire insulation for any cuts, abrasions, or exposed copper that have occurred during shipping. If there is a defect in the wire, do not continue the assembly process. Please call our Customer Service Team at 1-877-527-0313.

Warranty

LIMITED WARRANTY

WHAT IS COVERED

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modification, alteration, neglect, or mishandling.

WHAT IS NOT COVERED

This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor/expense costs involved in the replacement or repair of said product.

Contact Customer Care at 1-877-527-0313 or visit www.hamptonbay.com.

Pre-Installation

PLANNING INSTALLATION

Read all instructions before assembly and installation. To avoid damaging this product, assemble it on a soft, non-abrasive surface, such as carpet or cardboard. Inspect each part for defects that may have occurred during shipping. Keep your receipt and these instructions for proof of purchase.

TOOLS REQUIRED

Safety goggles



Measuring tape

Phillips screwdriver

Flathead screwdriver



Wire strippers

Wire cutters

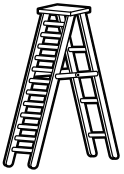

Ladder

Electrical tape

HARDWARE INCLUDED

NOTE: Hardware not shown to actual size.

AA



BB



CC

DD

EE

FF

GG

Part	Description	Quantity
AA	Wire nut	3
BB	Crossbar	1
CC	Outlet box screw	2
DD	Mounting screw	2
EE	Ground screw	1
FF	Suction cup	1
GG	GU10 50W bulb	1

Pre-Installation (continued)

PACKAGE CONTENTS

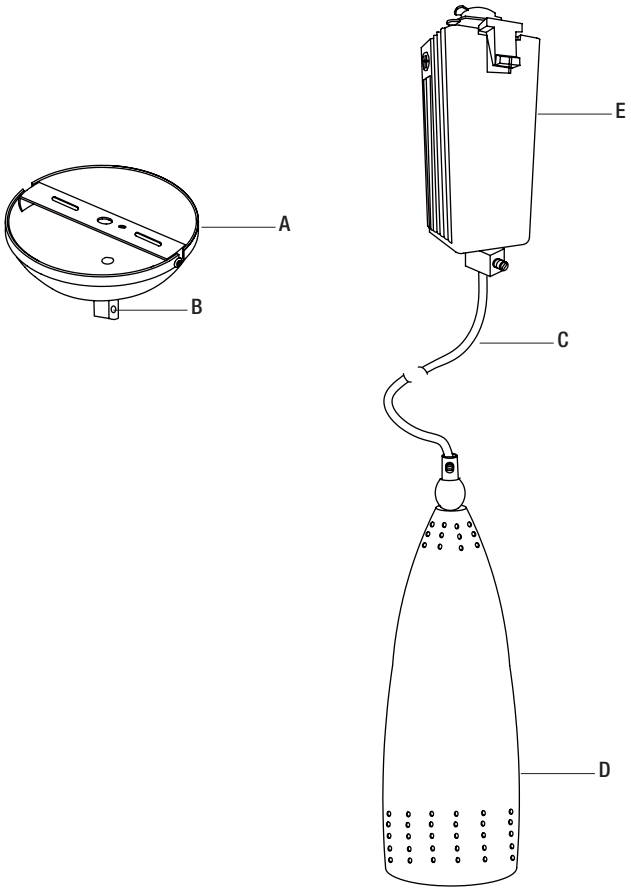

Part	Description	Quantity
A	Canopy	1
B	Wire clamp	1
C	Pendant cable	1
D	Fixture body	1
E	Track adapter	1

Installation - Track Adapter Mounting

1 Adjusting the cable length

IMPORTANT: This fixture is provided with 6 ft. of cable. If a shorter length is desired, follow these steps carefully. Failure to follow these instructions will result in the failure of this product! If length is suitable, proceed to step 3.

- ☐ Unscrew the two side screws (HH) and pull the track head (H) out.
- ☐ Unscrew the wire nuts (AA) and unlace the knot (K).
- ☐ Pull out the cable (C) from the track adapter (E).
- ☐ Cut the pendant cable (C) to the desired length.

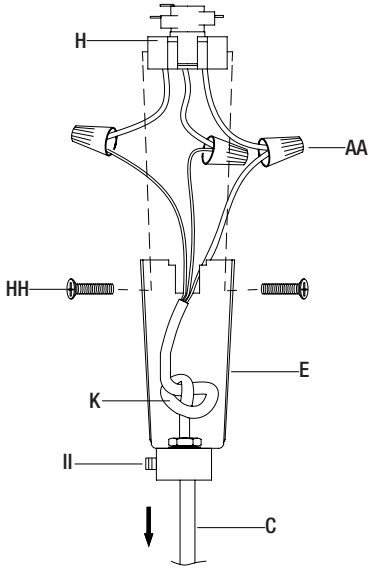

2 Connecting the track adapter wires

NOTE: Always use wire nuts (AA) or marrettes (included) to connect wires and push all excess wire and connections back into the track adapter housing (E).

- ☐ Pass the pendant cable (C) through the wire clamp (B) and the track adapter (E) housing.
- ☐ Tie a knot (K) in the pendant cable (C). The shortest height allowed is 17 in.
- ☐ Separate a portion of the pendant cable (C) from the interior insulated wire and expose about 1/2 in. of the insulated wire.
- ☐ Connect the pendant cable (C) as follows, using wire nuts (AA):

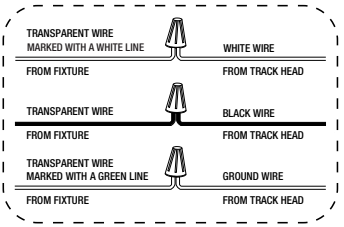

- ☐ Secure the pendant cable (C) by tightening the screw (II) on the wire clamp (B).
- ☐ Fix the track head (H) to the track adapter (E) housing and secure with the two side screws (HH).

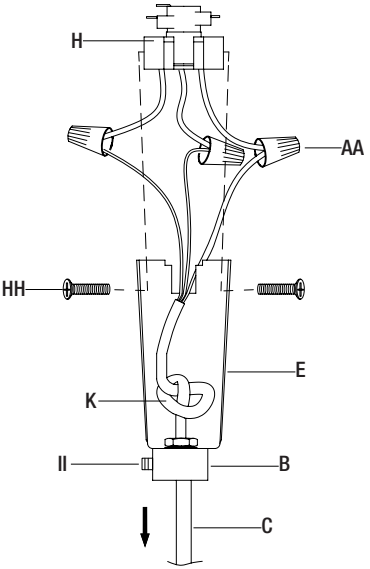

3 Installing the track adapter to the track system

CAUTION: To reduce the risk of fire and electric shock, use only luminaire assemblies marked for use with EC or H Series – Hampton Bay track.

NOTE: For proper connection, the contact pins (JJ) on the side of the track head (H) should be positioned against the contact points on each side of the track, ensuring they are touching.

- ☐ Push the track adapter (E) into the track opening and twist it to lock it in place.

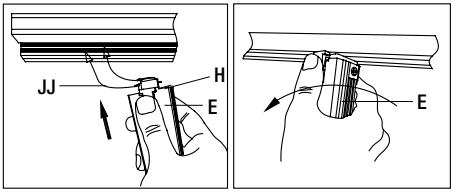

4 Installing the bulb

- ☐ Insert the GU10 50W shielded bulb (GG) and rotate it clockwise using the suction cup (FF).

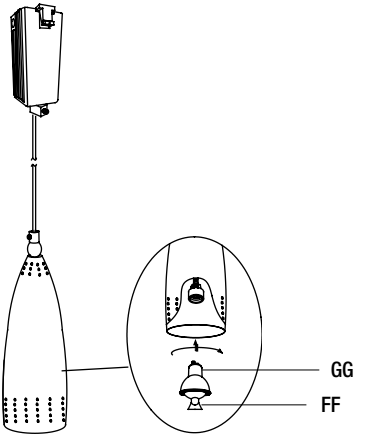

5 Removing the track pendant lamp from the track system

- ☐ Hold the track adapter (E) and push down the unlock handle (I) on the track adapter (E). Twist to unlock the track adapter (E).

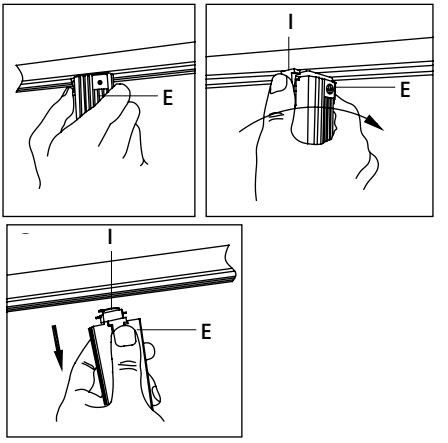

Installation - Surface Mounting

1 Disconnecting the cables from the track adapter

IMPORTANT: This fixture is provided with 6 ft. of cable. If a shorter length is desired, follow these steps carefully. Failure to follow these instructions will result in the failure of this product! If length is suitable, proceed to the electrical connection.

- ☐ Unscrew the two side screws (HH) and pull the track head (H) out.
- ☐ Unscrew the wire nuts (AA) and unlace the knot (K).
- ☐ Pull out the cable (C) from the track adapter (E).

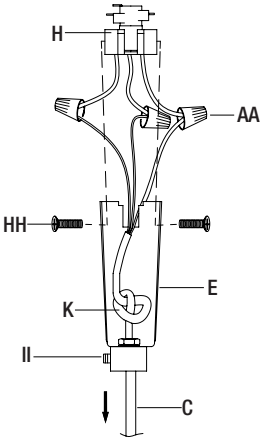

2 Connecting the pendant cables

- ☐ Remove the crossbar (BB) from the canopy (A) by loosening the mounting screws (DD) on the canopy (A).
- ☐ Loosen the screw on the wire clamp (B).
- ☐ Measure the desired length of the pendant cable and add 6 in. for re-attachment.
- ☐ Pass the pendant cable (C) through the wire clamp (B) and the canopy (A).
- ☐ Tie a knot (K) in the pendant cable (C). The shortest height allowed is 17 in.
- ☐ Separate a portion of the pendant cable (C) from the interior insulated wire and expose about 1/2 in. of the insulated wire.
- ☐ Secure the pendant cable (C) to the canopy (A) by turning the screw on the wire clamp (B).

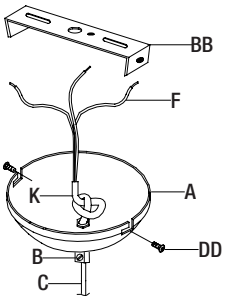

3 Installing the crossbar

- ☐ Turn off the power at the main fuse box before installation.
- ☐ Attach the crossbar (BB) to a junction box with the outlet box screws (CC) provided.

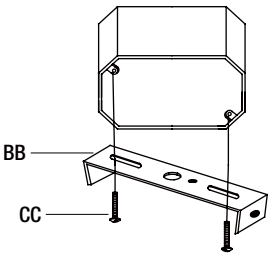

4 Connecting the wires

NOTE: Always use wire nuts (AA) or marrettes (included) to connect wires and push all excess wires and connections back into the junction box.

- ☐ Connect the ground wire from the branch circuit to the ground screw (EE) on the crossbar (BB).
- ☐ Connect the pendant cable (C) as follows:

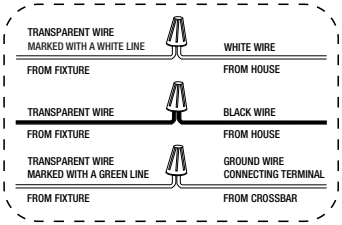

- ☐ Insert the mounting screws (DD) through the holes in sides of the canopy (A) to attach the canopy (A) to the crossbar (BB).

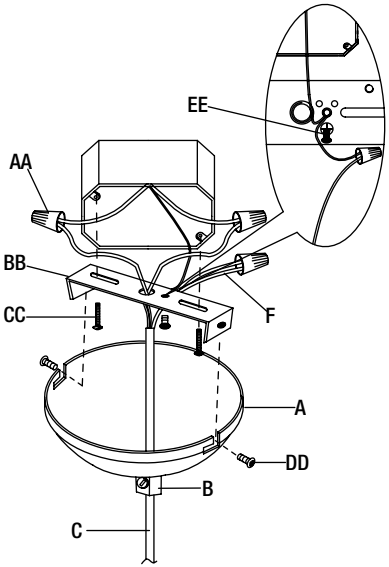

5 Installing the bulb

- ☐ Insert the GU10 50W shielded bulb (GG) and rotate it clockwise using the suction cup (FF).

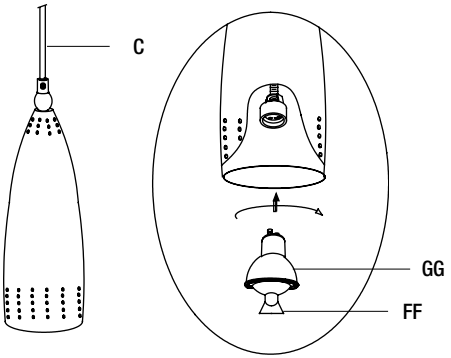

Care and cleaning

- Clean the light fixture carefully with a soft, dry cloth. Do not use any cleaner with chemicals, solvents, or harsh abrasives.

Troubleshooting

Problem	Possible Cause	Solution
The bulb will not light.	The bulb is burned out.	Replace the light bulb.
	The power is off.	Ensure that the power supply is turned on.
	The circuit breaker is off.	Ensure that the circuit breaker is set to the ON position.
The fuse blows or the circuit breaker trips when the light is turned on.	There are too many items on one circuit.	Unplug the other items on the circuit. Contact a qualified electrician or call the Customer Service Team at 1-877-527-0313.

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. - 6 p.m., EST, Monday-Friday

1-877-527-0313

HAMPTONBAY.COM

Retain this manual for future use.